


SPECTRUM

Safe Screen Assembly Instructions

Important


This product requires 2 people for assembly.

Before handling any of the panels please note that there are “**Do Not Lift**” stickers placed on the long narrow tabs of each panel. During the handling and assembly process of your Safe Screen please avoid placing any weight or leverage on this area of each panel. Otherwise, damage may occur.

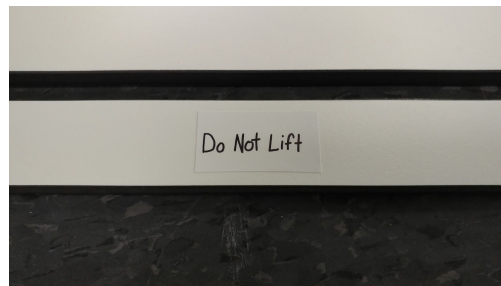

Step #1

Lay the back panel on the floor, using the provided foam blocks as spacers. If preferred, the foam blocks can be temporarily applied using the peel and stick backing.

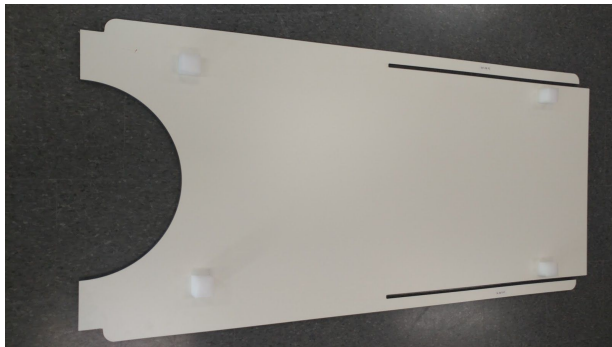

Apply foam blocks if desired



Flip panel over onto foam blocks

Step #2

Stand the side panel up with the back edge of the panel facing the floor. Begin to slide the side panel into the slot on the back panel. Have one person slide the panel, while the other person ensures the tabs are aligned with the slots. This is particularly important when the tabs reach the centre of each panel.



Ensure tabs and slots are aligned to avoid interference



Your Safe Screen should now look like this

Step #3

Repeat Step #2 with the remaining side panel.



Your Safe Screen should now look like this

Step #4

With two people, tip the unit up by lifting from the top. Position your Safe Screen into place. Remove all stickers and foam blocks.



Your Safe Screen is now complete and ready to use.